


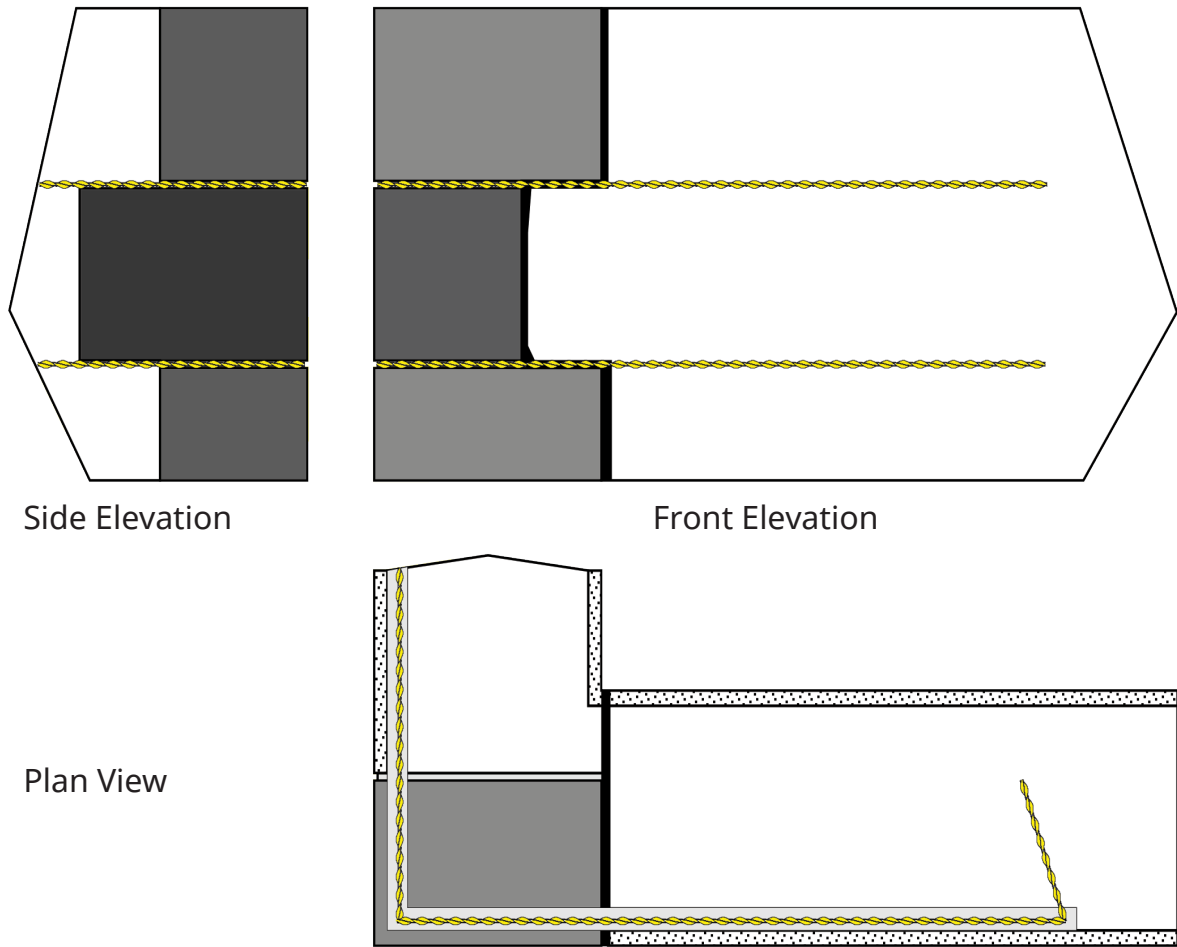

**⚠ Read the safety information overleaf**

## Method Statement

1. Rake out or cut slots into horizontal mortar joints
2. Vacuum out the slots and dampen with water
3. Using the Bond Flex gun kit, insert a 10 mm depth bead of Bond Flex into back of the slot
4. Push the Bar Flex into the Bond Flex to obtain good coverage
5. Insert a further bead of Bond Flex over the exposed Bar Flex and iron into the slot using the finger trowel
6. Re-point or fill the rest of the slot and leave ready for decoration

## Guidelines

- A. Depth of slot is between 55 and 70 mm
- B. For long lengths of Bar Flex, overlap runs by a minimum of 500 mm
- C. Nominal vertical spacing is 450 mm
- D. Where a crack is within 300 mm of the end of a wall, the Bar Flex is to be continued for at least 500 mm around the corner and can be fixed into the adjoining wall
- E. All free ends of Bar Flex (including overlaps) should be returned into the wall a minimum of 200 mm

## Materials



Bar Flex 6 mm



Bond Flex



Water

## Tooling



Angle Grinder



Vacuum



Bond Flex Gun Kit



Finger Trowel



Drill

## Safety Equipment



Dust Mask



Eye Protection



Hand Protection



Ear Protection

### Need help?

Our nationwide installation team is fully trained and insured to carry out this installation. Find your local branch now